


## FRG100 Install:

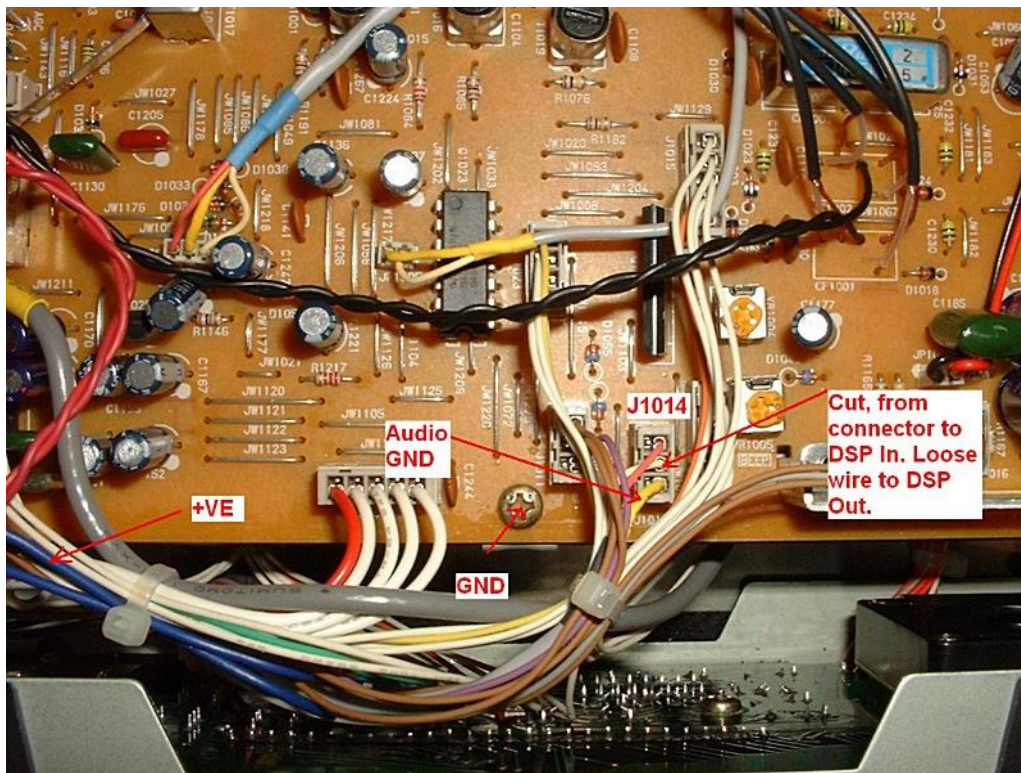

- Solder tag - GND screw
- Audio in - screened lead red wire
- Audio out - screened lead blue wire
- Audio ground - screened lead screen
- Power +ve - red lead

For more information please refer to the general fitting instructions for the NEDSP1061-KBD